



With SYNCRO cords (optional)



Strobes from SEA&SEA, INON, and Nikonos must be used in manual power modes when connected via electrical sync cord.

An internal electric circuit controls the two syncro cords by means of 3 switches.


If the switch is positioned on **[OFF]** it will be possible to **work with the flash in manual mode**; if the switch is on **[ON]** it will be possible to **work in TTL** in the case the used flash offers this function.

By keeping both switches on 'On' **[ON | ON]** there will be a conflict between the two flashes working in **TTL** so this combination is not recommended.


To set the **manual mode** put the **1,2,3 pins of the left switch and 2,3,4 of the right switch on [OFF]** as indicated in the *figure 11* below:

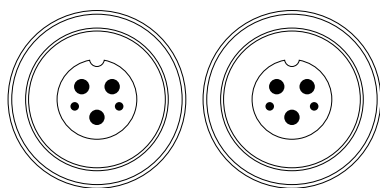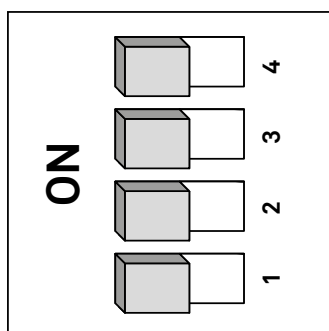

TTL

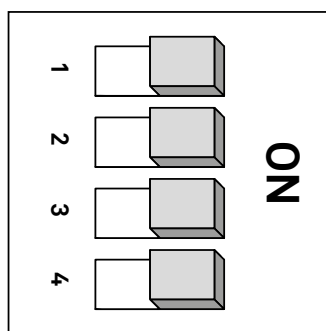

TTL

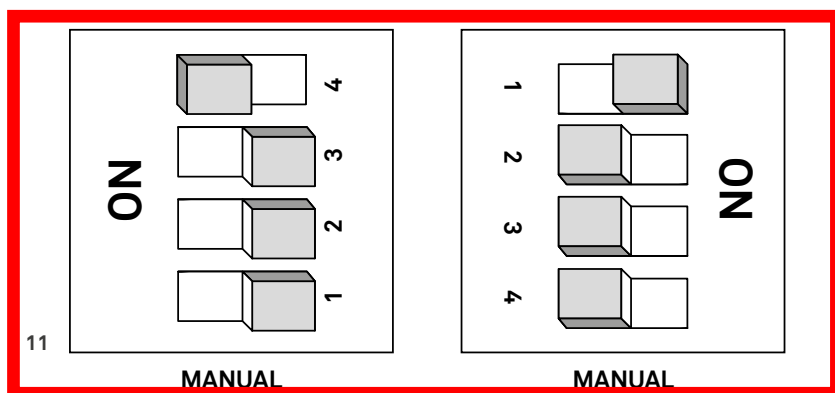

MANUAL

MANUAL

⚠ N.B. This is also necessary in case of any troubles when using syncro cords with the strobe in manual mode.